

Installation guide for Citygreen's Arborguy SAS

Contents list:


- Arborguy x3
- Drive rod (Optional)
- Strap and ratchet tensioner ... x1



Instructions:



Step 1 Drive rod to be inserted into pressed anchor

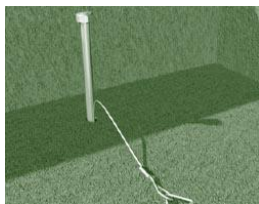

Step 2 Anchor to be driven into ground leaving just triangle ring above surface.


(NB. Position anchors equally around rootball)



Step 3 Strap to be threaded through rings, over rootball, into ratchet tensioner.

(Re-tension if necessary)

Additional equipment list:

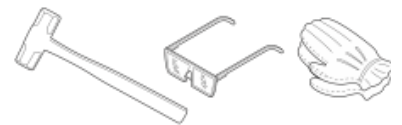

- Sledge hammer
- Gloves
- Goggles

Hazard warnings



Danger while driving anchor into the ground



Danger sharp edges

For further technical help contact our support team info@citygreen.com